



OUTDOOR & SPORTING EVENTS • CAMPING • PICNICS • FISHING • PET GROOMING • CAR & DIY TASKS & REPAIRS • CAR BOOT SALES



## Make any space -*your place*

Carnopy provides personal space and ALL weather protection, is easily transportable, and can be assembled in minutes for a multitude of leisure & practical purposes.



# Assembly Instructions

Whilst the Carnopy is not complicated to assemble, it is a new concept. Therefore we suggest you take a few minutes to read the information below and familiarise yourself with the different parts. It will save you time when you first assemble the product.

Your Carnopy is provided with a variety of straps. Please check the contents of the bag against the list below to make sure you have all of the necessary parts to assemble your Carnopy. Once you have identified the straps please refer to the next page for the correct configuration for your vehicle; hatchback, side opening rear door, small van, large van etc.

**A**



**STRAP A (25cm):** 4 x Short straps with a 'D' ring and a buckle at the end.

**B**



**STRAP B (100cm):** 4 x Long straps with nylon hook at one end.

**C**



**STRAP C (100cm):** 4 x Long straps with nylon buckle at one end. These are extension straps. They are needed when fixing cones to the roof of your vehicle. They are not required on Hatchback vehicles.

**D/E**




**STRAP D (60cm):** 1 x Long Centre strap 'D' Ring.

**STRAP E (40cm):** 1 x Centre strap 'D' Ring with a buckle.

The centre straps (D) and (E) are only required when fixing cones to the roof of your vehicle. They are NOT required when fixing to a hatchback door.

**F**

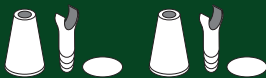


**CONES:** 2 x Roof Cones, Carnopy Dome Rests & Protective Rubber Rings.


When you have identified the straps, simply join the 4 Straps (A) and (B) together, and join the 2 straps (D) and (E) together.



Ensure Buckle is this way up

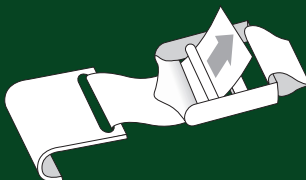

Feed in from below

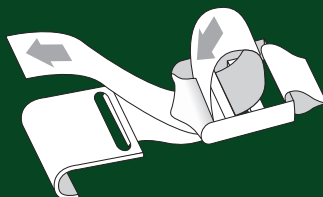

Fold over and down through

# Strap Configurations

## General

This set of assembly instructions is more comprehensive than those on the Carnopy Outer Box, where they show the centre strap as a single or fixed strap with two 'D' rings. We have since modified this strap so it is now adjustable. Therefore it is in two parts, not one and has a buckle.

This centre strap is NOT required when fixing the Carnopy on the rear door. It is intended for use when fixing your Carnopy to a car/van with a side-hinged door.

## Cone Assembly

Fix rubber rings to base of cones. (Providing a protective layer between cone & vehicle)

## PLEASE CHOOSE THE CORRECT STRAP CONFIGURATION FOR YOUR VEHICLE.

### FIG. A - STRAPS FOR HATCHBACK DOORS/BONNETS:

**Fig.A** is for hatchback cars, where you will fit the straps to the top and bottom of the door or bonnet. The cones will therefore be fixed on the back door/window/bonnet ready to have the Carnopy clipped to them.

A-1 (x2) Clip straps to top of closed door/bonnet

A-2 (x2) Clip straps to bottom of closed door/bonnet

### FIG. B - FOR SIDE HINGED REAR DOOR:

In **Fig.B** the cones are sitting on the roof of the vehicle and the straps are extended down to the wheel arch or other convenient part of the vehicle where they should be fixed and tensioned. The Centre strap IS required in this configuration so that the cone is held securely in place.


B-1 (x2) Clip straps to left wheel arch or similar

B-2 (x2) Clip straps to right wheel arch or similar


### FIG. C - STRAPS FOR LARGE VEHICLES:

For large vehicles please follow the same instructions for side hinged rear door shown in **Fig B**, but connect the extension straps to the configuration as shown in **Fig. C**


There are two other straps supplied, they are marked wheel arch. These straps fix directly to the Carnopy fabric and are not part of the cone and strap system. See visual instructions.

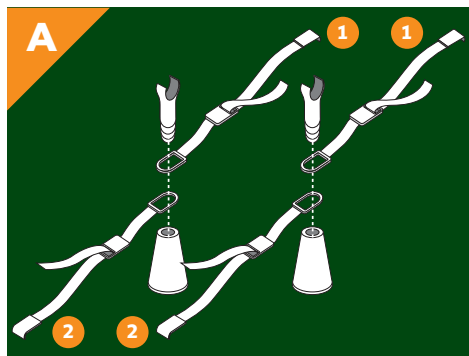

**Straps for hatchback doors:** Assemble the set of straps for the Carnopy where the Cones will sit on the rear door.

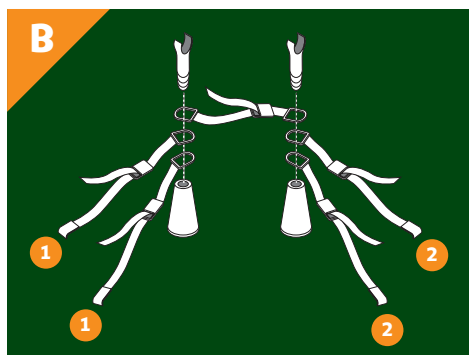

**For Side Hinged Rear Door:** e.g. Discovery, include the centre strap which joins the two cones together and fix down the side of the car to wheel arch or similar.

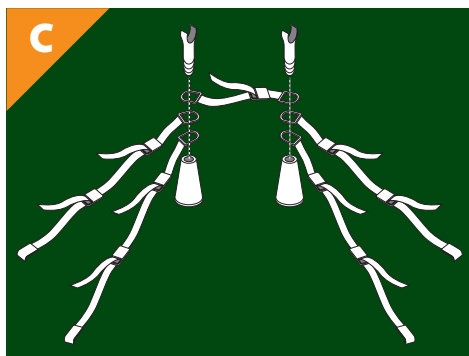

**Straps for Large Vehicles:** Use the extension straps as shown. This will in effect lengthen the straps so that they can be used down the side of the vehicle.



**Step 1:** Having Assembled the straps (A or B), fix to rear door or roof for side hinged doors. (Use the extension straps if required.)



**Step 2:** Velcro Top pole section into front corners so that spike goes through the eyelet.



**Step 3:** Slide the three section steel pole into the rear sleeve and join in the middle.



**Step 4:** Hook the tab over the spike at each end of the steel poles.



**Step 5:** Lay out the fabric and insert the fibre poles into the roof sleeves



**Step 6:** Connect the fibre poles to the spikes in the 4 corners.



**Step 7:** When in position, the fibre poles will create a dome shape.



**Step 8:** Clip the Carnopy to the cones and loosely strap to the rear bibs.



**Step 9:** Place out the front legs and then open the door.



**Step 10:** Adjust bibs and wheel arch strap to secure tightly.



**Side Panels:** These panels are not included with the Carnopy, but they can be purchased as a pair directly from our head office. Please contact us directly on the number below for further information.

The Carnopy has been fireproofed but precaution must be taken. Do not use BBQ's, gas cookers or naked flames near or under this product.

[www.carnopy.co.uk](http://www.carnopy.co.uk)

Carnopy Ltd  
PO Box 65, Rottingdean,  
Brighton. BN2 7YQ  
Tel: +44 (0) 871 288 2051  
Fax: +44 (0) 871 288 2053

Manufactured in China  
Patent Pending  
European Community Registered Design No: 000116546  
Fireproofed to BS 7837:1996  
Carnopy is a registered trademark of Carnopy Ltd